



# SWiMP3




**WATERPROOF • DESIGNED FOR SWIMMING!**

*Enjoy your favorite music while swimming!*

**256Mb • 8 Hours of Battery Life • Plays MP3's and WMA's • Bone Conduction**

## 1 STEP WHAT IS INCLUDED WITH YOUR MP3 PLAYER

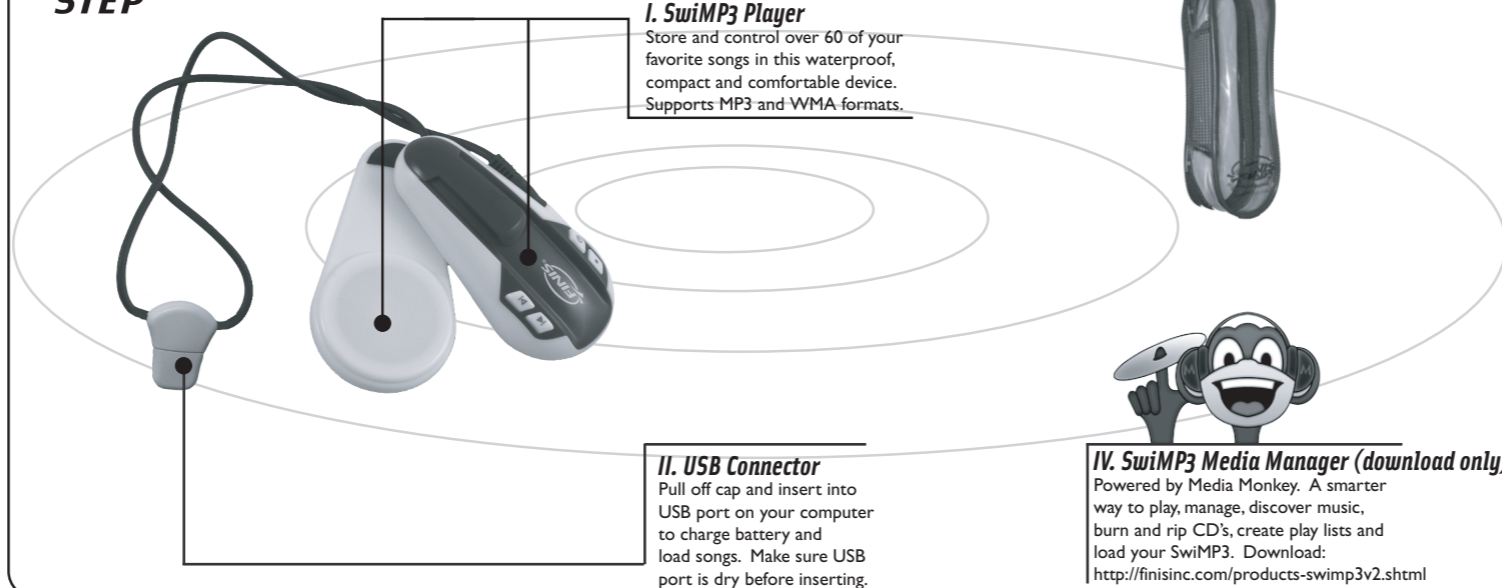

## 2 STEP HOW TO CONNECT TO YOUR COMPUTER AND CHARGING

1. Make sure both the USB connector and the SwiMP3 are completely dry before connecting.
2. Pull the cap off the USB connector located between the two bone conduction speakers.
3. Insert the USB connector into one of the USB ports on your computer. If the SwiMP3 doesn't seem to be recognized by your computer, try another USB port or a USB extension cable.
4. The SwiMP3's battery will charge through the USB port. Let the SwiMP3 charge until the green light stops blinking. A full charge should take approx. 3 hours, and provide 8 hours of playback.
5. Be sure to safely remove the SwiMP3 from your operating system before unplugging the USB connector.

## 3 STEP GETTING STARTED

1. **Mac** users can load the SwiMP3 from their iTunes library. In most cases your songs will need to be converted to MP3 format, songs from the iTunes store can not be converted. To create MP3s, change your "Import Using" option in the preferences to MP3 encoder. Then import a CD into your library or highlight a song from your library and select "Convert Selection to MP3" from the Advanced menu. Converting a song will create a duplicate. Since you will have two copies of any songs you convert you can check the format of a song by highlighting it, and selecting "Get Info" from the File menu. To load songs onto the SwiMP3, simply drag them from your iTunes library to the NONAME drive on your desktop. When deleting songs from your SwiMP3, you will have to empty your trash before the space will become free again.

2. **Windows** users can copy MP3 and WMA tracks to the Removable Disk in "My Computer" or use the SwiMP3 Media Manager which can be downloaded from [finisinc.com](http://finisinc.com).

**A. Importing Existing Songs** - The first time you run the SwiMP3 Media Manager you will be prompted to "Add Folders." If you already have songs in MP3 or WMA format, you will want to import them into your library, if you do not yet have any songs you will want to click "Cancel". To import songs you will need to select the folders where your MP3 and WMA files are stored, or just click "OK" to have your entire C drive searched for songs to be added to your library. Limiting the folders you select to only those which have songs will speed up this process. To import songs in the future select "Add/Rescan Tracks to the Library" from the File menu.

### B. Importing Songs from your CD Collection

• Insert your CD into your computers CD or DVD drive. Select the correct drive from within the My Computer tree. If you can not see your drives click the + sign to the left of the "My Computer" icon to expand the tree.

• Once the CD drive is selected the list of songs on the CD will be displayed. If you have an internet connection and the CD you are using is a complete album the SwiMP3 Media Manager will try to access the internet to obtain the Artist, Album and Track names for your CD.

If this does not happen automatically, you can right click the drive which contains the CD and select "Get Album Info from Freedb". If you are using a mixed CD you will have to enter the Artist, Album and Track Names manually by right clicking either the CD drive or an individual song and selecting properties, it is suggested that you enter at least an Album name for each CD you import. If you have a firewall program make sure you allow the SwiMP3 Media Manager to have access to the internet.

• Once you have received or entered the CD's information, right click the CD drive and select "Rip Audio CD". The Rip CD window will appear; here you can select where you want the songs to be saved, how you want the songs to be named, which format you would like the songs to be imported as, and which songs from the album you want to import. Uncheck the box next to any songs you do not wish to import. By default, the format will be MP3 and all songs will be selected to import; only advanced users should attempt to change the way the songs are named and where the songs are saved. Once you have made your selections click "OK".

• The Rip CD window will disappear and a progress bar will appear across the bottom of the SwiMP3 Media Manager window. The progress will move from left to right to show you how much of the CD has been imported. This bar will also show you which track is currently being converted and where the track is being saved on your computer. When the CD has been completely imported the bar will disappear.

**IF YOU NEED THE WINDOWS 98SE DRIVER, SWiMP3 MEDIA MANAGER OR A MORE DETAILED USER GUIDE VISIT THE FINIS WEBSITE OR DOWNLOAD DIRECTLY FROM:**  
<http://finisinc.com/products-swimp3v2.shtml>

**SEE REVERSE SIDE FOR LOADING INSTRUCTIONS**

## 4 MANAGING AND LOADING MUSIC TO YOUR MP3 PLAYER

### STEP

- A. To fill your SwiMP3 with a random selection, right click the SwiMP3v2 icon and choose "Auto-Synchronize."
- B. To add songs to your SwiMP3 manually, click one of the yellow icons listed under the Library icon, click the + sign next to the library icon if it is the only yellow icon showing. The songs in your library will be displayed to the right and sorted by the column that correlates to the icon you selected. Example: if you select the Artist icon, your library will be displayed to the right and sorted alphabetically by the Artist's name.
- C. At this point you can add songs directly to the SwiMP3. Songs will play back in alphabetical order by folder and song.
  - To add songs directly to the SwiMP3, simply click on a songs title and drag it from the right to the SwiMP3v2 icon on the left. When you drop a song on the SwiMP3v2 icon, you will see a progress bar appear across the bottom of the SwiMP3 Media Manager window.

• To confirm that your songs have been copied to the SwiMP3, click the SwiMP3v2 icon. Check that all of the intended songs were copied to the SwiMP3.

• To delete songs from the SwiMP3 simply right click a song and select "Remove".

## 5 SAFE REMOVAL OF YOUR MP3 PLAYER

### STEP

• Mac users can simply drag the NONAME drive into the trash. It will then be safe to unplug the SwiMP3.

• Windows users can right click the SwiMP3v2 icon in the SwiMP3 Media Manager and select "Safely remove device". If you are not using the SwiMP3 Media Manager you can use the Windows safely remove hardware process.

• **It is highly recommended that the SwiMP3 is safely removed each time it is connected to your computer.**

## 6 USING YOUR MP3 PLAYER

### STEP

#### PREV / VOL -

- a. PREVIOUS TRACK - Press the button once.
- b. VOLUME (-) - Press and hold the button until desired volume is reached.

#### NEXT / VOL +

- a. NEXT TRACK - Press the button once.
- b. VOLUME (+) - Press and hold the button until desired volume is reached.



#### RESET

- a. Press to reset your MP3 player.

#### ON / OFF

- a. ON - Press and hold for 2 seconds.
- b. OFF - Press and hold for 2 seconds

#### EXTRA FUNCTIONS:

##### 1. PAUSE

- a. Press the ON/OFF button to pause playback, press ON/OFF again to resume playback.

##### 2. SHUFFLE

- a. Press and hold the NEXT/Vol+ and the PREV/Vol- buttons at the same time. The green light will blink twice to indicate SHUFFLE mode is on.
- b. Press and hold the NEXT/Vol+ and the PREV/Vol- again to turn SHUFFLE mode off.

## 7 TROUBLESHOOTING

### STEP

#### • When I turn on my SwiMP3 the green light just blinks twice?

• This is an indication that the player is either empty or does not have playable songs loaded. Make sure you have songs loaded and that they are either MP3 or WMA format.

#### • My computer is not recognizing my SwiMP3?

• Make sure the USB connector is securely plugged into the USB port on your computer. Check that the USB connector is not plugged in upside down.

#### • My SwiMP3 is skipping or stalling during playback, or I have playable songs loaded but they won't play.

• In either of these cases you will need to format your SwiMP3.

### FORMATTING YOUR MP3 PLAYER

• Plug in your SwiMP3 and open the "My Computer" window.

• Right click on the "Removable Disk" that represents your SwiMP3.

• Choose "Format" from the menu.

• Once the Format window appears, change the File System option to "FAT."

• Click the Start button, you will receive a warning that formatting will erase everything on the disk, click OK.

• Once the format is complete, close the format window and reload your songs.

The SwiMP3 is Covered by a 90 Day Limited Warranty.

### SAFETY

Only use attachments/accessories specified by the manufacturer.

Listening to music at full power over extended periods of time can be damaging to the hearing of the user.

#### Rinse SwiMP3 thoroughly after salt water use.

The SwiMP3 player is safe to use in and around water. It is waterproof up to approximately 3 meters or 10 feet and can be used safely in swimming pools, lakes, oceans or any body of fresh or salt water. It should not be used for any type of Scuba, free or skin diving and may malfunction or fail beyond its maximum depth of 3m/10ft. All users of this product assume risks resulting from its use. Whether proximate or remote, there may be a risk of injury. Neither manufacturer nor seller of this product assumes any liability.

### SYSTEM REQUIREMENTS

**System Requirements:** Windows® 98SE, 2000, ME, XP  
• Intel Pentium II 233 Mhz or equivalent • 128 MB RAM  
• 35 MB available hard drive space • USB port • CD- ROM drive  
• Internet connection recommended

**Windows 98 Support:** In order for the SwiMP3 to function with the Windows 98 Operating System, you must download the appropriate driver. visit [www.finisinc.com/drivers](http://www.finisinc.com/drivers) to access and download the Win 98 driver.

### CUSTOMER CARE

Any questions or issues regarding the SwiMP3, please direct inquires to the toll free number or email address below.

#### Customer Care Telephone and Email:

Tel: 800-388-7404

Email: [customerservice@finisinc.com](mailto:customerservice@finisinc.com)